

Elite Party Canopy: Stylish backyard canopies with a distinctive peaked roof and optional color band.

Elite Party Canopy Construction Features:

- 13-14 oz.vinyl laminate tent fabric
- Anodized sectional aluminum poles
- Stamped aluminum side pole fittings
- Reinforced corners and pole positions
- Storm lines at all center poles
- Sidewall ropes
- Attached/braided guy lines with sliders
- Storage bags included

Available Colors: Solid White, Red/White, Blue/White, Yellow/White and Green/White

Available in: 20' and 30' widths




www.eurekatents.com fax: 607.779.2291



ASSEMBLY [20'x30' SHOWN]:

1. Inspect the site and make sure the area is level, free of utilities and overhangs. Unload poles and tent bundles.

- 2. Lay the canopy out, on a ground cloth, with the top side up. Stretch and square the fabric to remove slack. Pull the guy ropes out from the canopy. See fig.1.
 - Thread one of the guy ropes through a hole in a slider.
 - Thread the end of the rope through the remaining hole in the slider and tie a knot to secure. To work properly, the rope must enter slider from the same side each time- as illustrated. Repeat with remaining guy ropes and sliders. See fig.2.
- 3. Drive the stake 4' out and at a slight angle away from the canopy. Stake the corners first, using two stakes placed at 90° from each corner. See fig.1. Continue staking until all guy ropes are at 4'. Be sure to leave enough slack in the guy ropes to raise the poles. Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.
- 4. If using aluminum poles, assemble them making sure each snap button is secured.
- 5. Install the side poles from the underside of the canopy. Insert pole pins up through both the grommet and the aluminum fitting. See fig.3. Stand the poles up at a 60° angle with their base toward the center of the tent. Set the corner poles first, then the side poles. See fig.4.

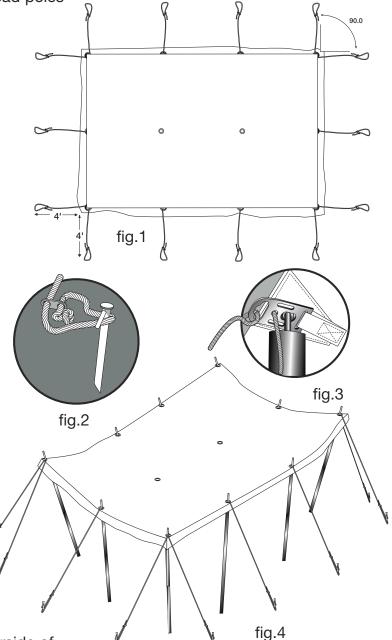




fax: 607.779.2291

one piece canopy

6. With the perimeter poles set, walk under the tent and insert center pole pin into the grommet at the top of the canopy. With this pin in place, lift and push the pin end skyward and the center pole base toward center of tent to raise the pole and canopy.

• If your tent has multiple center poles, the first pole base should be angled at 45° to center. Stake the base of this pole so that it does not slip. Raise the remaining center poles. When you have reached the 45° angles, stake each pole. Return to the first center pole and adjust to almost vertical. Adjust the other poles to almost vertical until all

- With all center poles almost vertical, bring them into line. Have someone stand at one end of the tent. Align each center pole as directed by that person. Then align each center pole from the sides of the tent. See fig.5.
- 7. If the top of the center pole appears to be leaning toward one end:
- Tighten guy ropes and straighten side poles, at the end opposite the lean, to pull the center pole back to true.
- Then straighten and adjust the guy ropes at the other end. Be careful, do not pull the center pole out of alignment.
- When center poles appear vertical, adjust opposing end side poles simultaneously to avoid drawing the entire tent toward one side or the other. After end side poles are adjusted and guy ropes are secured, repeat down the length of the tent. Again, avoid pulling or drawing entire tent to one side or the other.

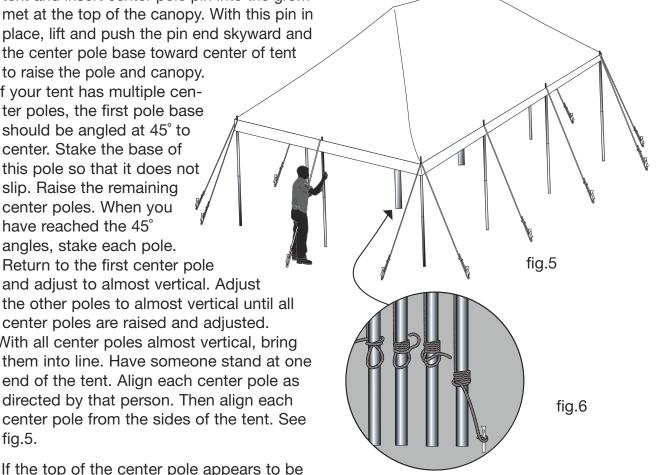

- Tie jump ropes to the side poles to secure. To prevent the canopy from lifting the center poles, drive a stake into the ground near the base of the center poles. Tie a jump rope around the pole and to the stake. See fig. 6.
- 8. If using sidewalls, clip the sidewalls to the valance rope. Sidewalls overlap approximately 2'. Buckle the ends to insure complete enclosure.
- **NOTE:** Severe weather can damage tents. If severe weather is expected, take down the tent and store in a safe area.



www.eurekatents.com fax: 607.779.2291